


CONFIGURING THE PALM MODEM FOR DIAL-UP HOTSYNC


- 1) Open the HotSync application.




- 2) Go into the Modem Sync Prefs... page from the pull-down menu.

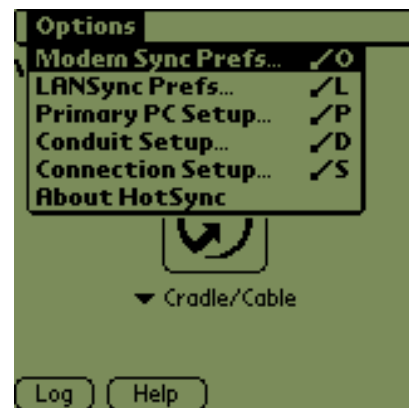


- 3) Choose Network and then OK.

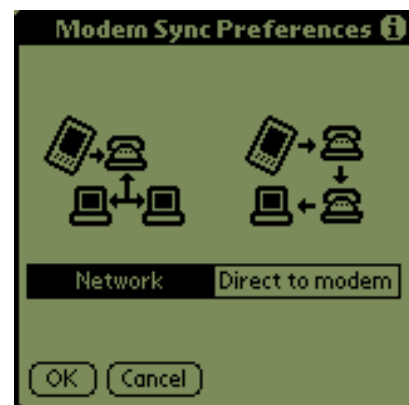

- 4) Go into the Primary PC Setup... page from the pull-down menu.

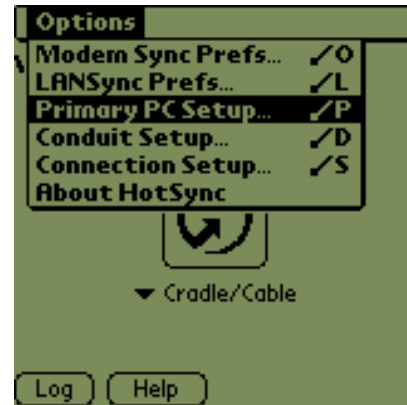


- 5) Fill in your Primary PC Name and Primary PC Address. For our purposes, they are the same, and can be found by right-clicking on My Computer | Properties | Network Identification. When finished, OK.

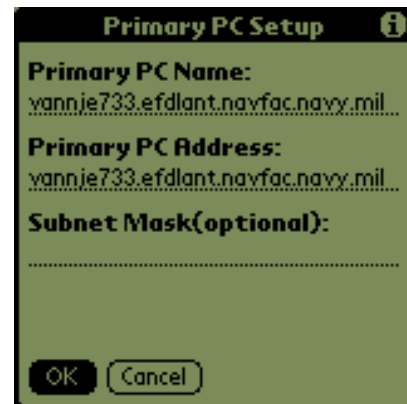

- 6) Once back to the HotSync screen, select Modem, and then the Select Service box.




- 7) From the Service pull-down box, select Windows RAS. In the User Name box, enter your network login. From the Connection pull-down box, select Palm V Modem. Set the phone number to be dialed, and then Done.

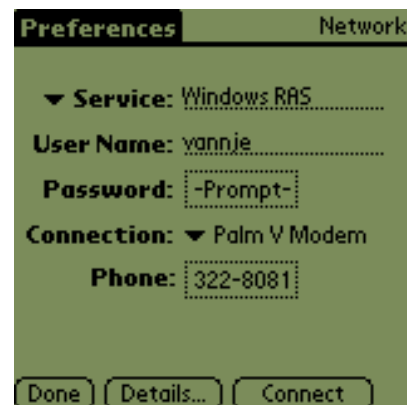

- 8) Your HotSync window should now look similar to the picture on the right. You can still HotSync through the cradle by selecting Local.



- 9) Make sure that Network (not Modem) is checked when you right-click the HotSync Manager icon in your taskbar (by the clock).

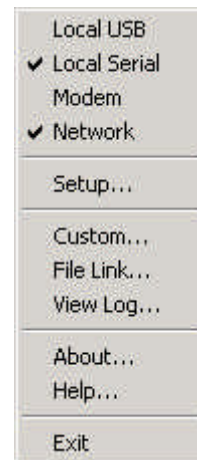

- 10) In order to HotSync, you must leave your desktop computer turned on and logged in. Instead of logging out and shutting down, press CTRL+ALT+DEL and Lock your workstation. When you return, simply enter your password, and continue from where you were. As always, remember to exit out of DIS and NEAMIS before leaving for the night.